


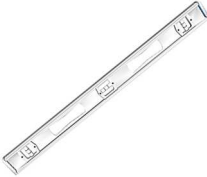


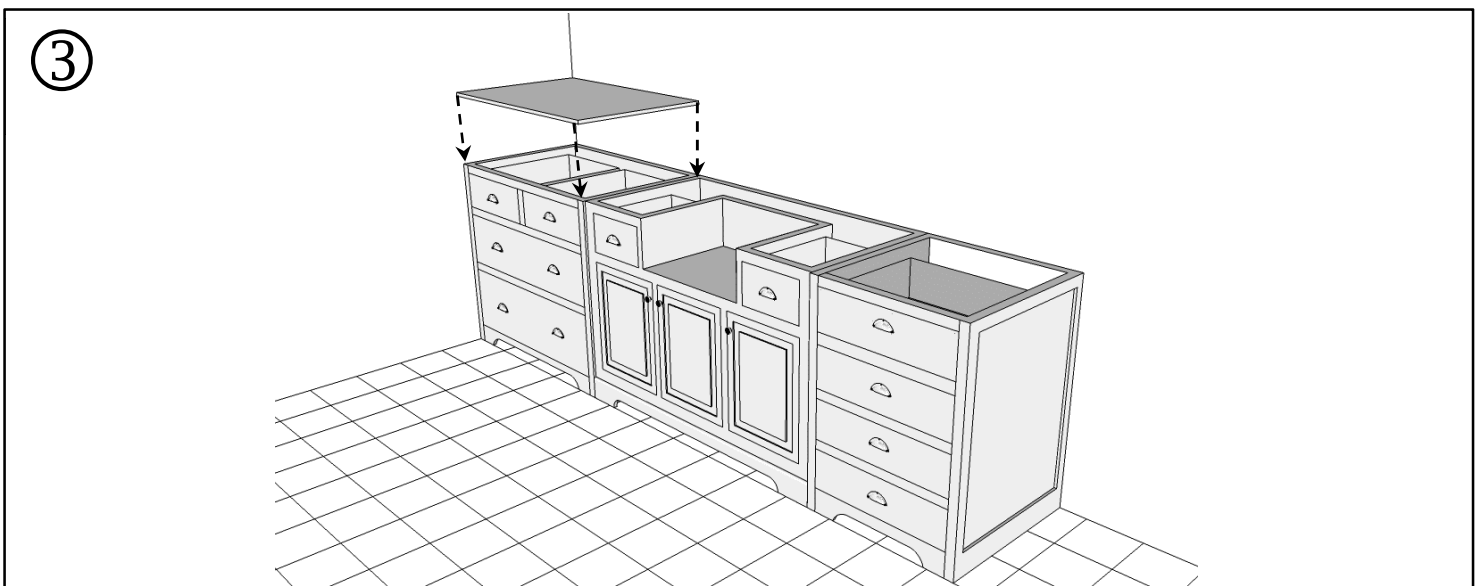
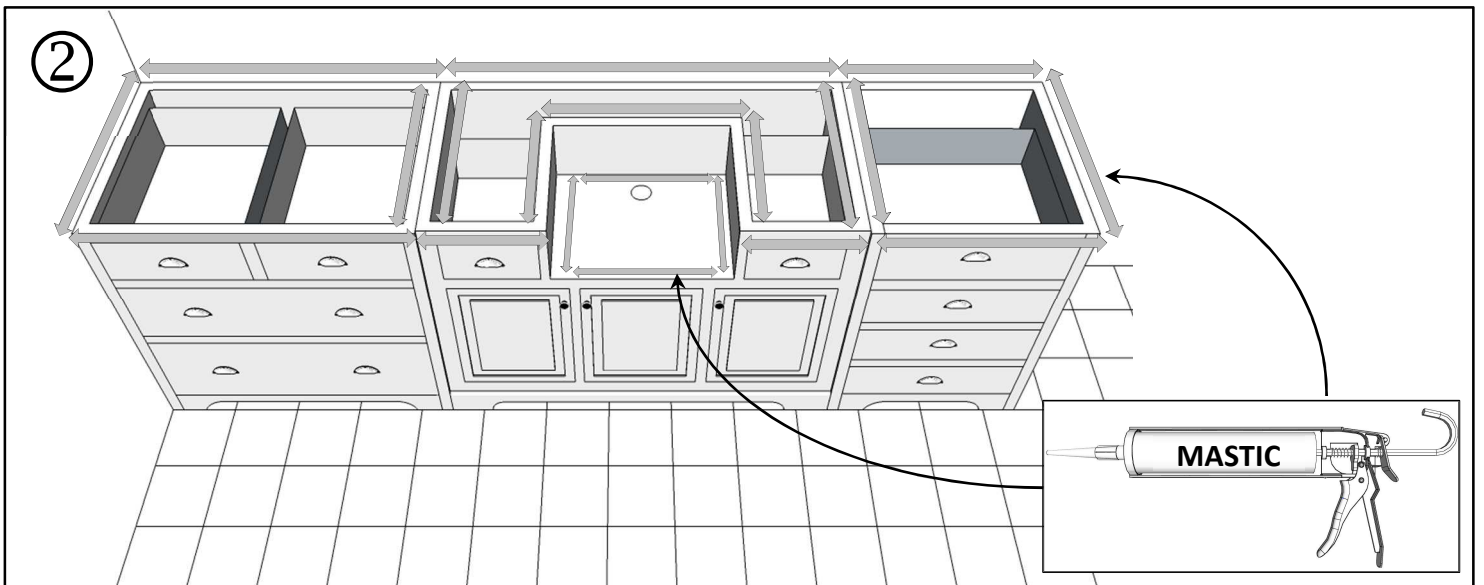
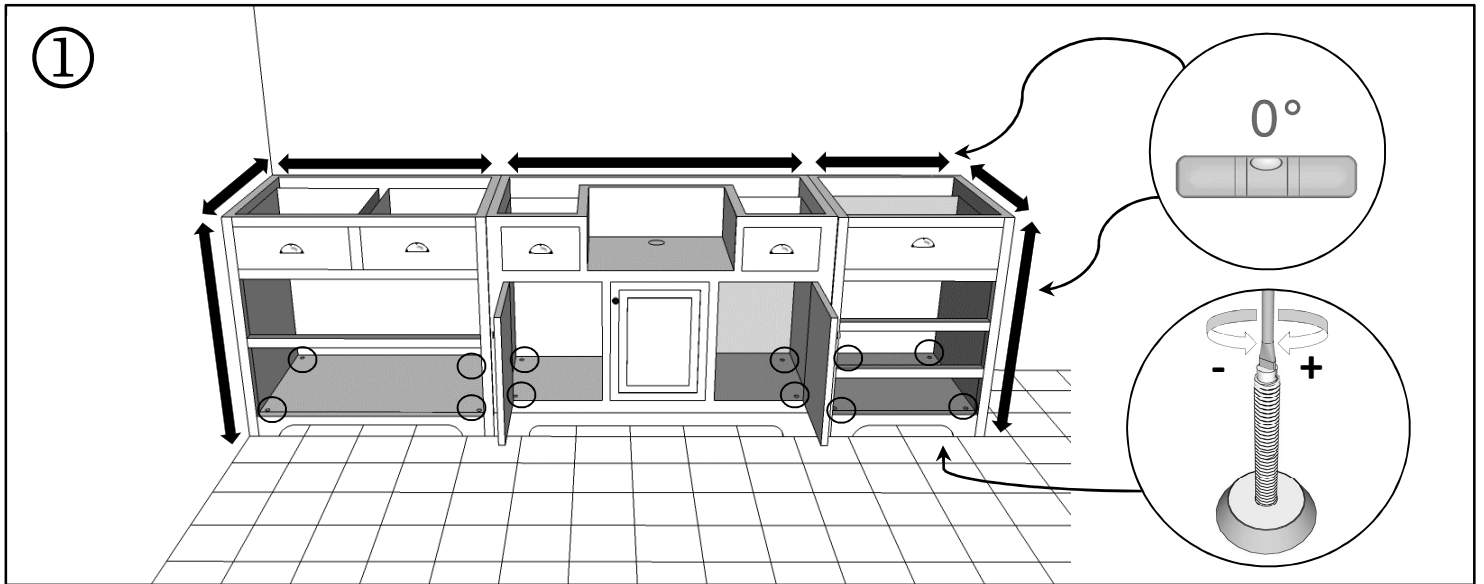
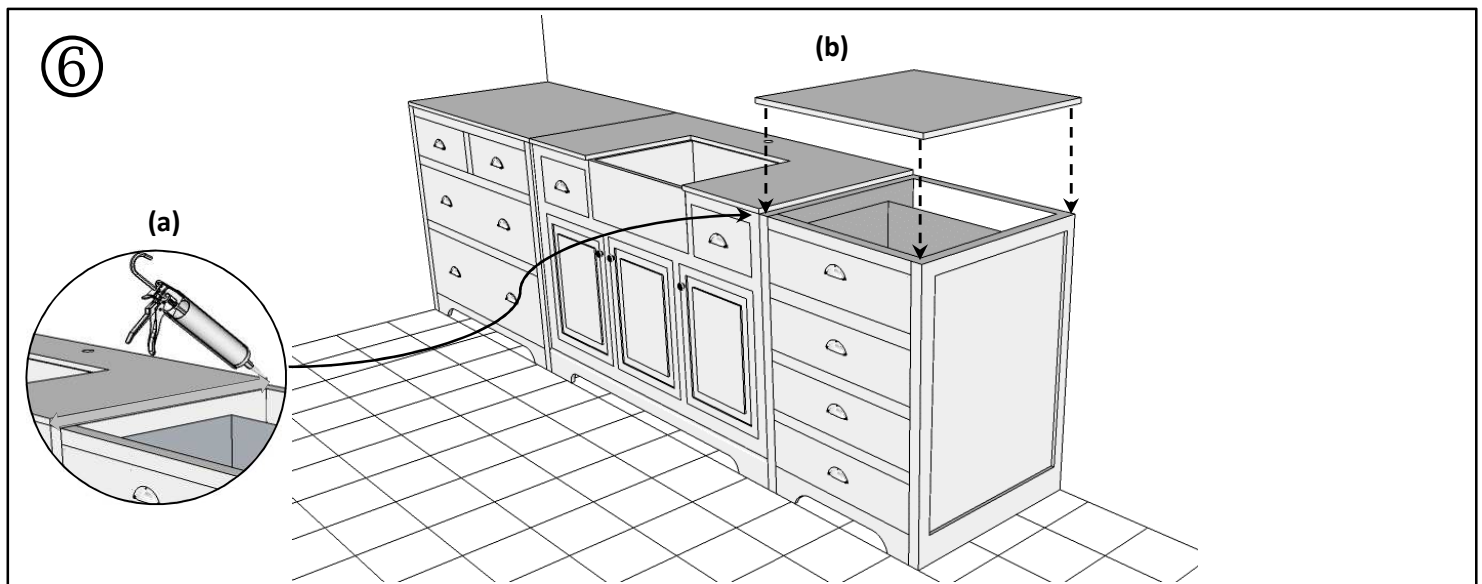
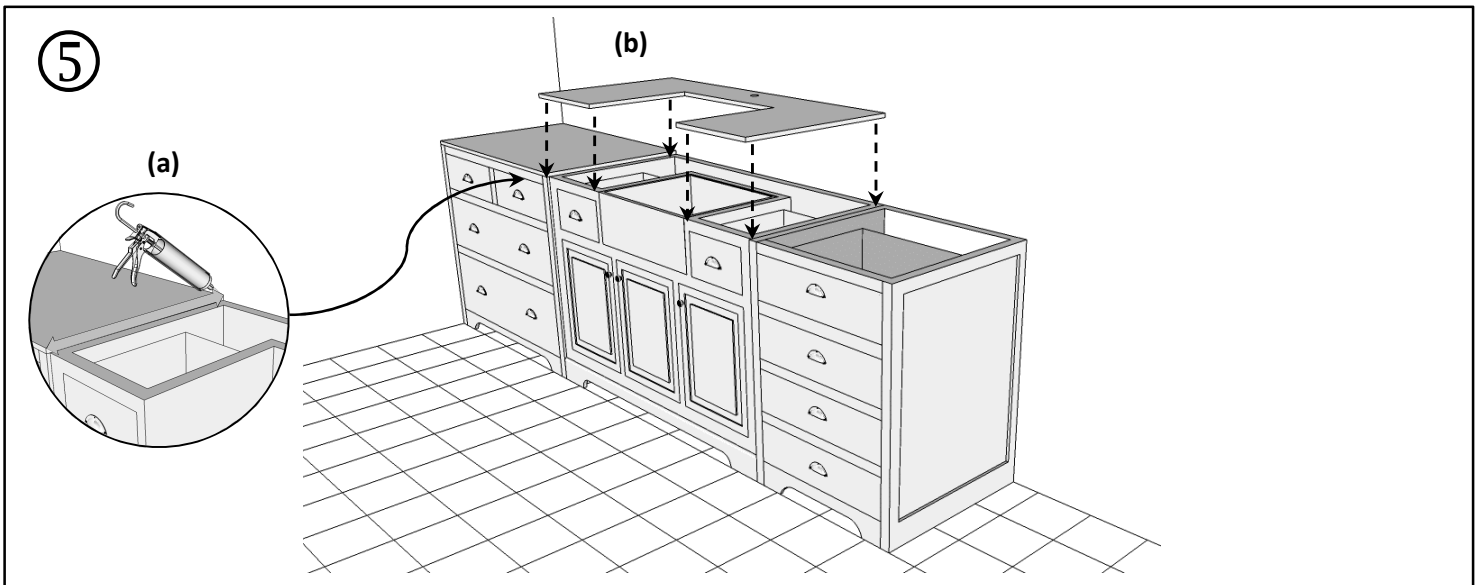
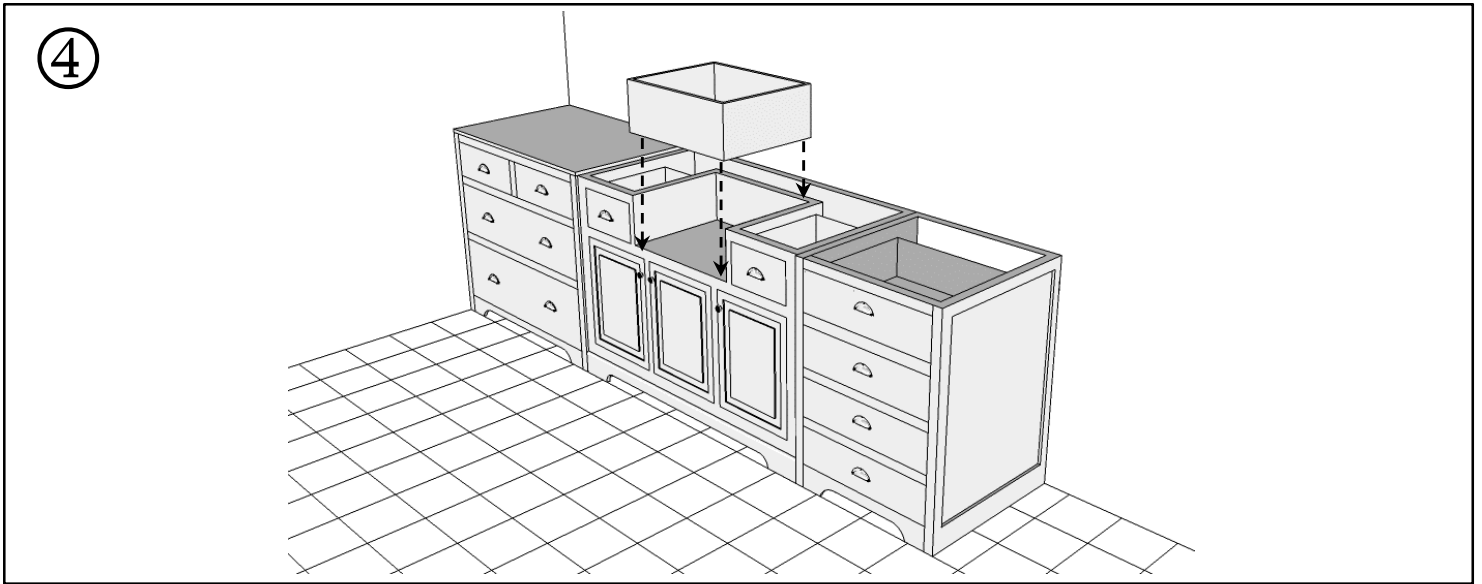



# MONTAGE PIERRES ELEMENTS BAS CUISINE

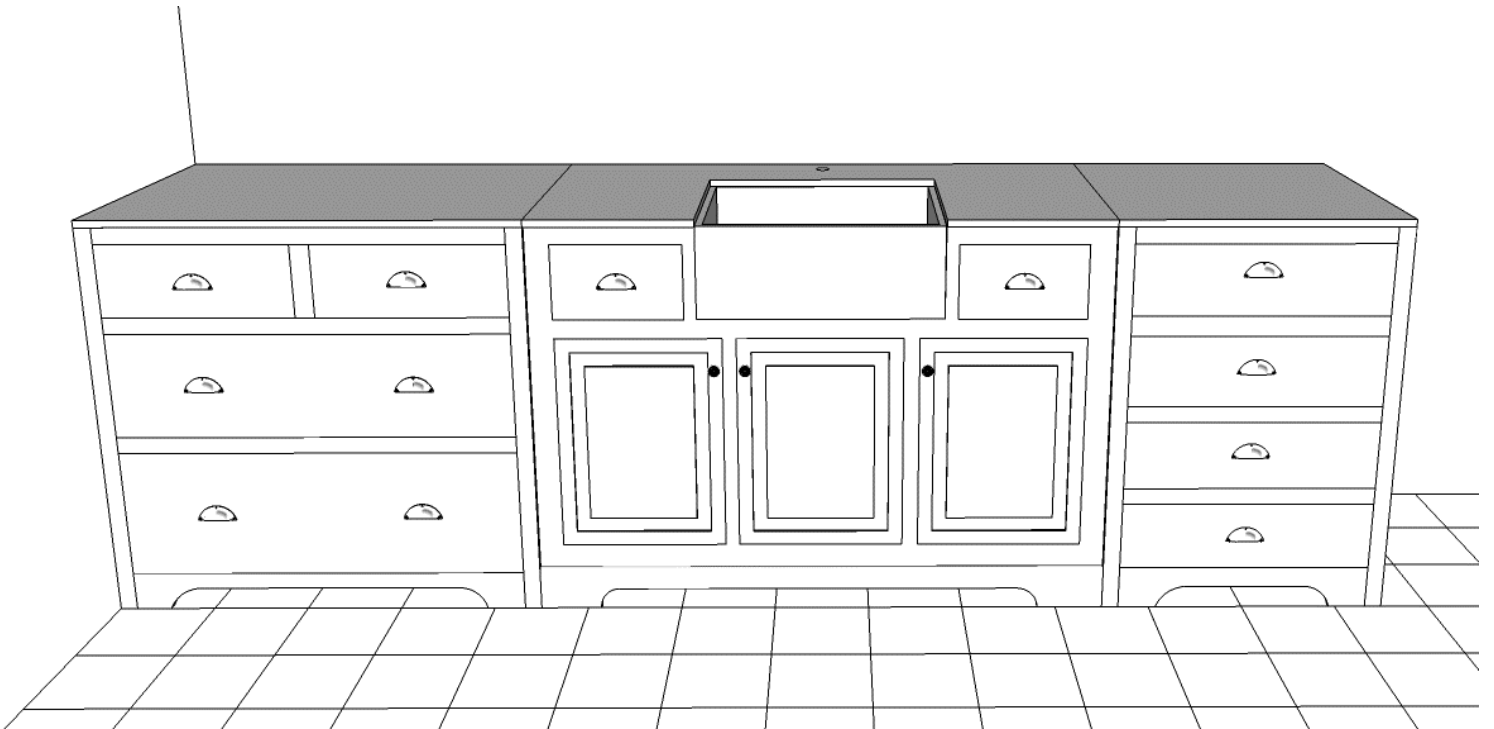



 30 MIN				
--------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------





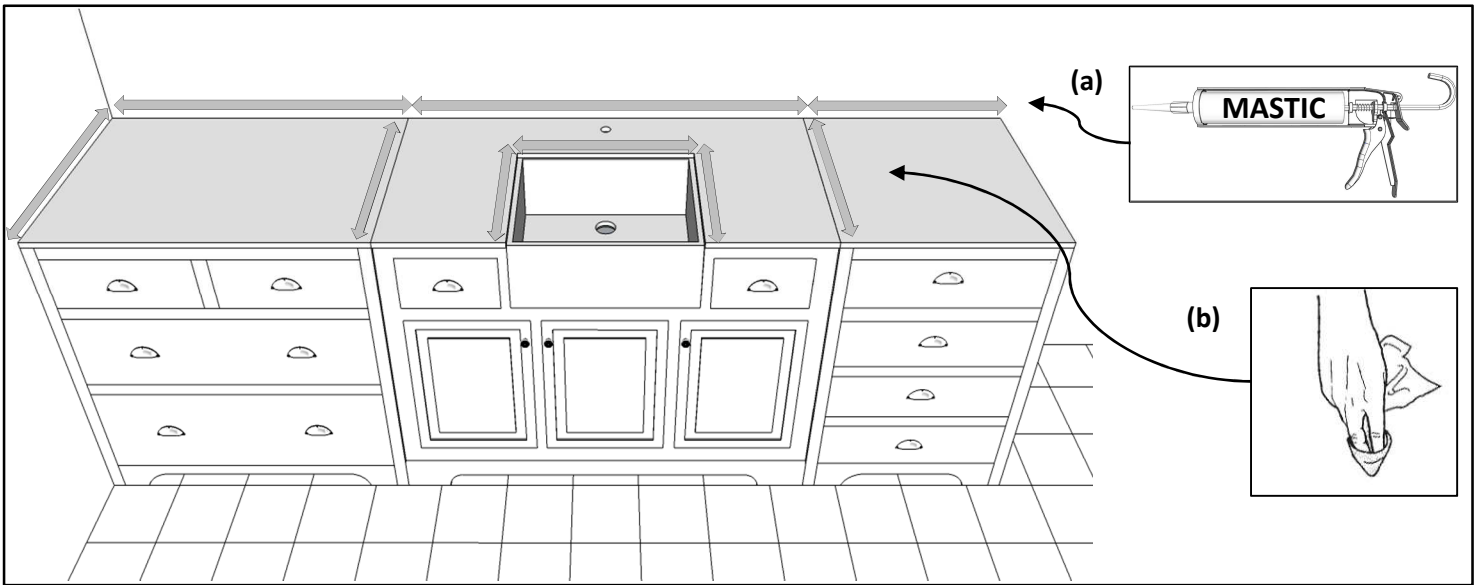

⑧

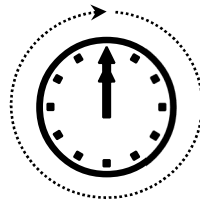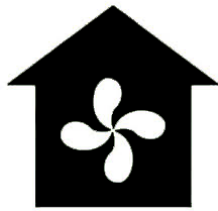

24H